

# **Clean Water Made Easy**

www.cleanwaterstore.com

# 7500-Rev4 Sulfur Air Filter with Ozone Option Installation Guide



Thank you for purchasing a Clean Water System! With proper installation and a little routine maintenance, your system will be providing odor free water for years.

Please review this start-up guide entirely before beginning to install your system and follow the steps outlined for best results.

The catalytic carbon media produces very small particles (fines) when the system is first installed. Bring the water pressure up VERY slowly during the initial backwash by opening the inlet valve slowly to avoid pushing the media into the control head.

Performing multiple backwashes at start-up is an important step.

You should also not bring other systems online (i.e. softeners, filters, etc.) until the Carbon system is fully flushed. Depending on the water quality, this may take several backwashes and a week or two of normal water use.

The Carbon media contains dust. Use a paper mask and ventilate area to avoid breathing dust when first pouring the media into the tank.

Minimum 30 PSI required. Maximum pressure 90 PSI.

For indoor installation. Protect from sunlight, rain, and freezing.

### **Questions?**

**Call us toll-free:** 1-888-600-5426 or 1-831-462-8500

**Email us:** support@cleanwaterstore.com

See more information on our website: <a href="https://www.cleanwaterstore.com/resource">https://www.cleanwaterstore.com/resource</a>

# **Table of Contents**

Packing List	4
Pre-Installation	5
Best Practices for Piping & Drain Installation	5
How the Bypass Valve Works	6
Installation of Your System in Copper or Metal Piping Systems	6
How Your <b>Sulfur Ozone</b> Iron Filter Works	7
Diagram of Typical Installation	7
Tank Assembly and Installation Instructions	8
Ozone Option Set Up	10
Set Date	12
Start the First Backwash	13
Advanced Programming Mode	14
Advanced Program Recommended Settings	15
Maintenance	16
Exploded Parts View	17
7500-Rev4 Water Filters Limited Warranty	19

### **Packing List**

**All systems include:** 7500-REV4 control valve, bypass valve, ozone generator with tubing, small tube of silicone grease, power supply, funnel for adding media, top screen, start-up guide, and items included in one of the following options:

### Find Your Size System to See What is included

### Sulfur Air Filter 1.0 cubic foot size

9" x 48" filter tank with distributor tube

12 lbs. filter gravel

1 CF Carbon media / 27.5 lbs.

### Sulfur Air Filter 1.5 cubic foot size

10" x 54" filter tank with distributor tube

16 lbs. Filter gravel

1.5 Carbon media / 41.25 lbs.

### Sulfur Air Filter 2.0 cubic foot size

12" x 52" filter tank with distributor tube

20 lbs. filter gravel

2 CF Carbon media / 55 lbs.

### Sulfur Air Filter 2.5 cubic foot size

13" x 54" filter tank with distributor tube

35 lbs. filter gravel

2.5 CF Carbon media / 68.75 lbs.

### What to Do if Your Tank is Not Level Out of the Box

Your filter tank base is not glued to the bottom of your tank. Occasionally, tank bases will become tilted during shipment.

If your tank does not sit on the floor, you can easily adjust it by holding the empty tank and tapping it on a concrete or solid floor once or twice to level it.

NOTE: There is no KDF used when using Ozone and we do not supply any when you use ozone. If you have upgraded to the Ozone, remove the KDF cubes before adding the Ozone option.

### **Pre-Installation**

- 1. Review your packing list and make sure you have received all the parts before installation.
- 2. If you are going to be turning off the water to the house and you have an electric water heater, shut off the power to the water heater before beginning installation in case water heater is accidentally drained.
- 3. Pick a suitable location for your filter system on a dry level spot where it won't be exposed to freezing temperatures. A minimum of 20 PSI is required. Maximum pressure is 90 PSI.
- 4. Get all of your plumbing parts together before beginning installation, and ensure you have received all your packages before beginning or scheduling an installation. Installation typically takes 3 to 5 hours. However, after installation the filter system must be allowed to run through a complete backwash and rinse cycle.

# **Best Practices for Piping & Drain Installation**

- 1. Make sure to connect the Inlet from your water source and outlet, following arrows on control valve bypass.
- 2. Make sure there is a working gate or ball valve before the system and also one after as well as a bypass valve.
- 3. A hose bib (which is a faucet to which you can attach a garden hose) is strongly recommended after your filter system and before the second ball valve. This makes it easy to rinse your filter system on start-up and gives you a place to test the water.
- 4. If you will be using copper piping, do not sweat the copper pipe directly on to the 7500-REV4 control valve.
- 5. To connect drain line to drain, use an air-gap connection, so that if your sewer or septic tank backs up, it cannot cross connect with the drain tubing.
- 6. The pipe connectors are 1' male pipe thread but you can add a reducer to reduce to ¾" pipe with common pipe fittings if needed.
- 7. Make sure bypass valves are closed (system is in bypass) when you first start installing and keep on bypass until you are ready to start it up with the first backwash.

# How the Bypass Valve Works

Turn knob so the valve is bypassed when installing.

When you go to start up system turn the bypass SLOWLY to let water in and put in service.



# Installation of Your System in Copper or Metal Piping Systems

If your new filter system is to be installed in a metal (conductive) plumbing system, i.e., copper, or galvanized steel pipe, the plastic components of the system will interrupt the electrical continuity of the plumbing system.

As a result, any stray currents from improperly grounded appliances downstream or potential galvanic activity in the plumbing system can no longer ground through the contiguous metal plumbing.

Some homes may have been built in accordance with building codes, which encouraged the grounding of electrical appliances through the plumbing system.

Consequently, the installation of a bypass consisting of the same material as the existing plumbing, or a grounded "jumper wire" bridging the equipment and reestablishing the contiguous conductive nature of the plumbing system must be installed prior to your systems use.

This is simple and easy step to take if you are installing your water treatment system into copper piping.


A simple ground jumper wire with a pipe clamp can be purchased at any Home Center, or hardware store etc. for a few dollars.

### How Your Sulfur Ozone Filter Works


Water enters the top of the tank and flows down through the media and up the distributor tube.

During backwash the flow of water is reversed and water flows down the distributor tube and up through the media, lifting and expanding the Carbon media.

During the backwash the Carbon is cleaned by the action of the water flowing through it.

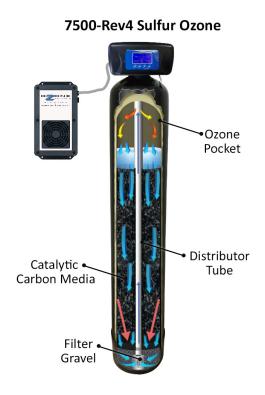

# **Diagram of Typical Installation**

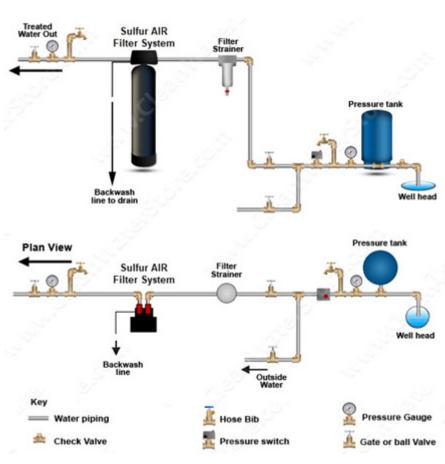

# **Tank Assembly and Installation Instructions**

- 1. Wrap the top of distributor tube with electrical or duct tape so that no gravel or Carbon media will go down the distributor tube.
- 2. Add the filter gravel that came with your order. You want the gravel to cover the bottom distributor screen before adding the Carbon media.
- 3. Next add Carbon media. Tank should be about 2/3rds full of media.
- 4. Fill tank completely with clean water and allow to soak for at least 1 to 4 hours to remove trapped air and gasses inside activated carbon media.
- 5. Remove tape from top of the distributor tube. Be careful not to pull up distributor tube.
- 6. Add a small amount of silicone grease to the inner O-ring, where the distribution tube goes.











- 7. Next, install the top screen by inserting upwards and rotating to lock in place. (This is a funnel-shaped plastic screen that locks into the bottom side of control valve.
- 8. Lubricate the main tank O-ring with silicone grease and screw on the 7500-Rev4 control valve carefully. Do not use pipe-joint compound, vegetable oil, Teflon tape, or Vaseline or other greases to lubricate tank threads.
- 9. Connect bypass assembly with 1" pipe connectors to control valve install black clips and make sure valve is in bypass.
- 10. Connect Air Inlet Check Valve to control valve.

- 11.Insert meter cable into meter cable port on bypass.
- 12. Install inlet and outlet piping (see flow arrows on valve) and hook up drain line tubing to drain.
- 13. If you are in earthquake zone, strap your backwash filter tank to wall with metal strapping.
- 14. Proceed to programming your 7500-Rev4 control valve timer and backwash frequency.

IMPORTANT: you must program the time and then start a backwash and rinse. The filter system must be backwashed and rinsed several times before using. See following pages for instructions.

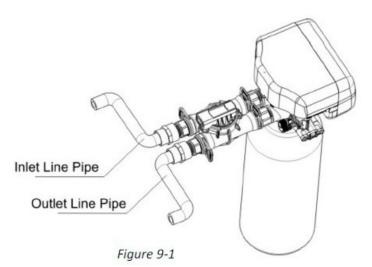

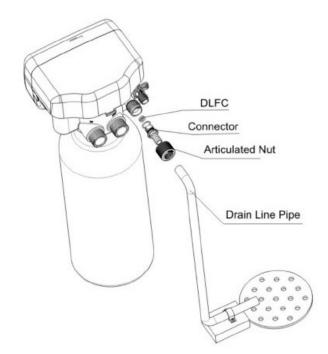

### **Ozone Option Set Up**

To be performed after the media has been installed into the tank and the control valve has been installed.

It is OK to install the Ozone unit but wait to plug the unit in to electrical outlet until you have completed your initial backwashes.

Install the 1" gray water inlet check valve to the inlet of the Bypass Assembly. Verify the flow direction is correct.





Install ozone Generator unit to the tank as shown. Place the plastic tie strap approximately 12" from the top of the tank and slide behind the clip. Snug the strap.



Install the BLFC housing assembly, the Ozone inlet Check valve, and the 3/8" x 5/16" adaptor into the control valve and secure with the black clip.

Insert one end of the 5/16" Silicone tubing into the fitting. Note the tubing should go in approximately 3/8".



# **Programming Your Valve**



### How to Start a Manual Backwash: Press the Back / Regen button

Pressing "Back Regen" at any time results in an immediate manual regeneration.

Pressing and holding for 3 seconds, when system is locked, results in a delayed regeneration at the preselected time.

### **Extended Power Outage Indicator**

If power outage exceeds 3 days, the time-of-day indicator "\_" will flash 12:12. The current time of day needs to be re-set. All other set parameters remain stored in memory. The valve will resume to operate from the point of the power outage.

### **Lockout Function**

Keypad will lock after 5 minutes without use. To access the parameter changes, press and hold "Up" and "Down" buttons simultaneously for 3 seconds to unlock.

NOTE: To start all you need to do is set current time and date. All other parameters have been preset for you

# Set Time of Day

- 1. If LOCK icon is lit, press, and hold both **UP and DOWN** buttons for 3 seconds to unlock keypad.
- 2. Then press the **MENU/CONFIRM** button to enter the main menu.
- 3. Press DOWN button to select "Set Time of Day"
- 4. Press the **MENU/CONFIRM** button again to change time of day (Hour will flash)
- 5. Adjust hour by using DOWN or UP buttons.
- 6. Press the **MENU/CONFIRM** button again to change minutes (Minutes will flash)
- 7. Adjust minutes by using DOWN or UP buttons.
- 8. Press Back/Regen

### **Set Date**

- 1. If not in the main menu, press the **MENU/CONFIRM** button to enter the main menu.
- 2. Press DOWN button to select and scroll down to "Set Date"
- 3. Month: Press the **MENU/CONFIRM** button again to change time of day (Month will flash) and adjust to current Month date by using DOWN or UP buttons.
- 4. Day: Press the **MENU/CONFIRM** button again to change Day date (Day date will flash) and adjust to current day date by using DOWN or UP buttons.
- 5. Year: Press the **MENU/CONFIRM** button again to change Year date (Year date will flash) and adjust to current Year by using DOWN or UP buttons.
- 6. Press **BACK/REGEN** button to save current date and go back to menu.
- 7. Continue to review and/or change the remaining settings (as follows)



**Set Service Days** This is the number of days between backwash. Set for every 1 to 7 days depending on water quality. For example, the default setting is to backwash every 7 days. If you notice pressure loss in the house after 4 days, then change setting to every 3 or 4 days.

**Set Regen Time** This is the time your system will backwash. Default is 2:00 AM

**Set Backwash Time** Set for 10 minutes.

**Set Air Draw Time** Set for 10 minutes.

**Set Fast Rinse Time** Set for 8 minutes.

**Review Regen Times** This is number of times the system has backwashed. Just for reviewing.

**Review Software Version Version 5.0** 

### Start the First Backwash

- 1. After programming, the system must be run through 2 or 3 backwash/rinse regeneration cycles to clean the new filter media.
- 2. Start with both bypass valves in the **Bypass Position**.
- 3. Press the **BACK/REGEN** button once to enter the backwashing cycle.
- Lock

  Menu Back / Down Up

  Confirm Regen
- 4. When the backwash icon is displayed, **slowly** open the bypass to a quarter position to make the water flow into the tank and out the backwash drain line to drain.
- 5. After several minutes open bypass valve completely.
- 6. If possible, verify that the backwash flow corresponds with the size of your system below. You can easily run the drain hose to a bucket and using a watch verify the flow rate in gallons per minute. An adequate backwash is critical to properly clean clean the activated carbon media.

Make sure you have a minimum of these flow rates in gallons per minute. For example, if backwash water fills a 5-gallon bucket in 1 minute, you have 5 gallons per minute (GPM).

1.0 CF	6.6 GPM
1.5 CF	6.6 GPM
2.0 CF	8.1 GPM
2.5 CF	10 GPM

- 7. After the backwash, the system will automatically go into the fast rinse stage. The control valve will return to service status (indicated by the up flowing meter on the left) after the backwash and rinse are complete.
- 8. 8 Repeat the Regeneration (backwash and rapid rinse cycle) step 3 to 4 more times until you see clear water through the drain line or your hose bib after the filter system.

# CONGRATULATIONS, YOU ARE DONE SETTING UP YOUR NEW SYSTEM!

# **Advanced Programming Mode**

Skip this for most applications as your filter system has already been set to correct modes.

- 1. Plug the RevV4 in and immediately press in sequence **MENU/CONFIRM**, then press **BACK/REGEN** button, then press the **DOWN** button to enter the Advanced Programming Mode.
- 2. Press UP or DOWN buttons or to select the menu item to be changed
- 3. **NOTE:** If valve locks while programming, unplug power supply and repeat step above.
- 4. Press MENU/CONFIRM to enter the main menu
- 5. Press the **UP or DOWN** buttons to highlight each option.
- 6. Press **MENU/CONFIRM** to enter highlighted option.
- 7. Press the **UP or DOWN** buttons to adjust the value.
- 8. Press the **MENU/CONFIRM** to accept the changes.
- 9. Press **BACK/REGEN** button to advance to service status

# **Advanced Program Recommended Settings**

Screen View	Default Settings
View Company Info	CWS 831-462-8500
Set Valve Model	62605
Set Language	English
Set Company Info	CWS 831-462-8500
Set Hour Mode	12 HR
Set Time of Day	Current time of day
Set Date	Current date
Set Program Type	Interlock
Set Regen Cycles	No. 4
Set Set Clear Data	Close
Set Regen Mode	A-06
Set Service Days	4
Set Regen Time	2:00 AM
Set Backwash Time	10 Minutes
Set Air Draw Time	10 Minutes
Set Fast Rinse Time	8 Minutes
Signal Output Mode	b-01
Set Service Alarm	Disabled
Review Regen Times	NA
Review Software Version	Ver. 5.0

### **Maintenance**


Once a year clean or replace the nozzle and throat (Green ġnjector set) and replace the Ozone injection check valve. We have included spares for both with your initial system.

Turn off water pressure to your system and release any pressure by opening a hose bib or faucet downstream of the filter system.


Remove the two bolts covering the injector housing.

Using a small screwdriver, remove the injector nozzle, throat, and filter screen and clean with paperclip and rinse in vinegar to remove any deposits.

Every 5 to 10 years (in some cases it can last longer) remove control valve and empty the Sulfur Filter media and replace with new media.

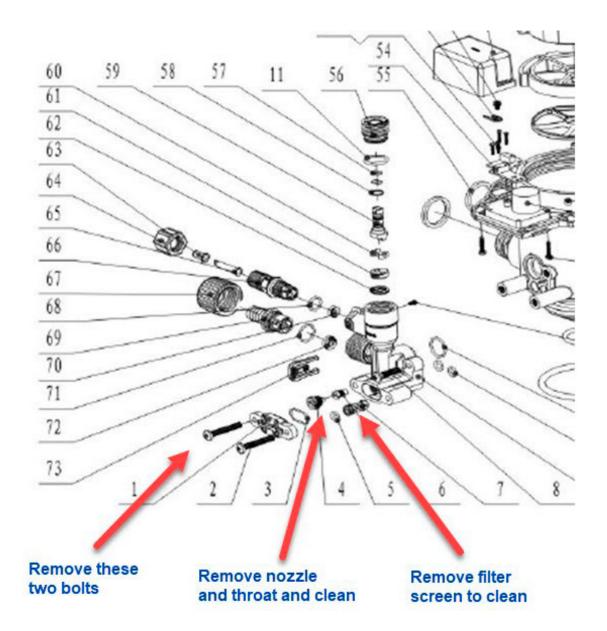

# **Exploded Parts View**

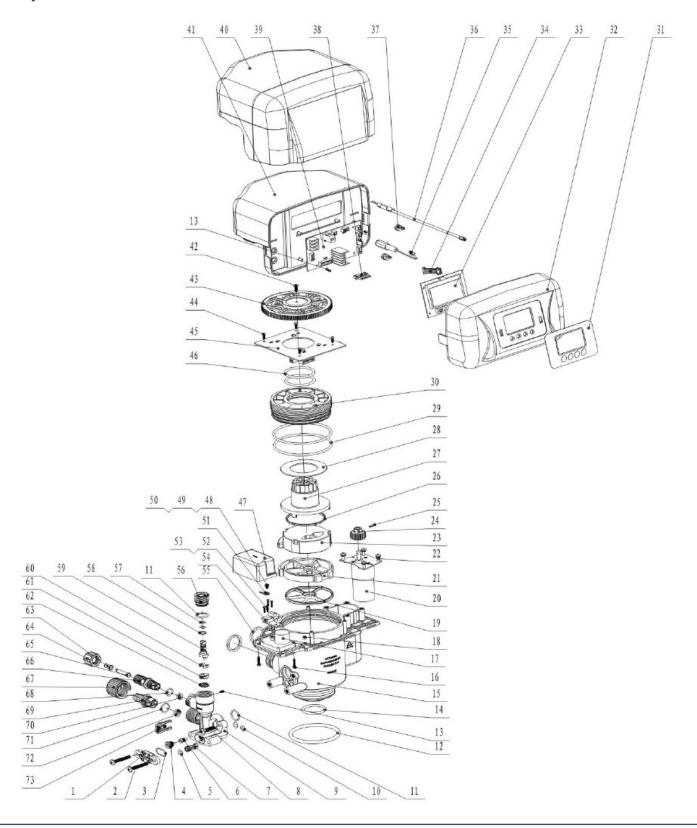

Item No.	Description	Quantity	Item No.	Description	Quantity
1	Injector Cover	1	38	Wire for Locating Board	1
2	Screw, Cross	2	39	Control Board	1
3	O-ring	1	40	Weather Cover	1
4	Nozzle	1	41	Dust Cover	1
5	O-ring	1	42	Screw, Cross	1
6	Throat	1	43	Gear	1
7	Filter Screen	1	44	Screw, Cross	4
8	Screw, Cross	1	45	Locating Board	1
9	Injector Body	1	46	O-ring	2
10	O-ring	2	47	Dust Cover	1
11	O-ring	2	48	Screw, Cross	1
12	O-ring	1	49	Washer	1
13	Screw, Cross	3	50	Spring Washer	1
14	O-ring	1	51	Pick	1
15	Valve Body	1	52	Screw, Cross	4
16	Screw, Cross	2	53	Spring Washer	4
17	Motor	1	54	Control Board	1
18	Screw, Cross	4	55	Seal Ring	2
19	Seal Ring	1	56	Fitting Nut	1
20	Motor	1	57	O-ring	2
21	Fixed Disc	1	58	Anti-friction Washer	1
22	Screw, Cross	4	59	Shaft	1
23	Moving Disc	1	60	Moving Disc	1
24	Small Gear	1	61	Fixed Disc	1
25	Pin	1	62	Seal Ring	1
26	Moving Seal Ring	1	63	Tube	1
27	Shaft	1	64	Hexagonal Nut	1
28	Anti-friction Washer	1	65	Net	1
29	O-ring	2	66	Connector	1
30	Fitting Nut	1	67	Articulated Nut	1
31	Label	1	68	O-ring	1
32	Control Box	1	69	Connector	1
33	Display Board	1	70	Brine Line Flow Control	1
34	Wire for Display Board	1	71	O-ring	1
35	Wire for Power	1	72	Drain Line Flow Control	1
36	Probe Wire	1	73	Clip	1
37	Cable Clip	2			

### 7500-Rev4 Water Filters Limited Warranty

We warrant this water filter when installed according to factory recommendations, to be free from defects in materials and workmanship as follows:

### **Limited Warranty**

This water conditioner unit is comprised of the finest industry components available. Each individual component used in the assembly of our equipment is covered by the original equipment manufacturer's warranty. All components, except those specifically listed below, are warranted for a period of one (1) year from date of installation to the original purchaser to be free of defects in materials and workmanship subject to the manufacturer's conditions and/or the conditions shown below.

### **Mineral Tanks**

The fiberglass, polyglass or composite mineral tanks used in the assembly of this unit are warranted to be free of defects in materials and workmanship for a period of ten (10) years on 6" – 13" size tanks, and five (5) years on 14" and larger size tanks used for softener/filtration applications, subject to the manufacture's conditions and/or the conditions shown below. **Warranty does not cover exposure to weather, freezing, fractures caused by external impact, or exposure to vacuum.** 

### **Control Valves**

The CWS control valve is warranted to be free of defects in materials and workmanship for a period or five (5) years.

### **Conditions**

- 1. This warranty only covers water conditioners installed for residential use. Water conditioners installed for commercial or industrial applications are guaranteed for one (1) year from the date of installation.
- 2. Installation must be made in accordance with legal or local codes and manufacturer's recommendations.
- 3. Failure must not result from exposure to weather, rodents, misuse, alteration, fire, lightning, power surges or neglect.
- 4. Water pressure must not exceed 100 PSI and water temperature must not exceed 100 degrees.
- 5. Subject to the above terms and conditions we will replace and/or repair, at our option, any parts of the water conditioner found defective in materials and workmanship. Defective parts must be returned, freight pre-paid for repair or replacement.
- 6. This warranty does not cover labor, shipping charges, damages caused by delays of consequential damages or other causes beyond our control. Warranty does not cover pipes, fixtures or appliances. Warranty extends to the actual water conditioner components only.
- 7. This warranty is to the original purchaser and is not transferable to any subsequent owner(s).
- 8. No other guarantees or warranty, expressed or implied, is applicable to our product. No repair or replacement made under the terms of the warranty shall extend this warranty.
- 9. Any product returned to Clean Water Store without a valid return authorization number will be rejected. Any product found to be defective will, at the sole discretion of Clean Water Store be repaired or replaced. Clean Water Store is not responsible for shipping cost to the repair facility.

19