




 


-  Ball Valve
-  Union
-  Pressure Gauge
-  Hose Bib
-  Check valve 1/4"
-  Check valve

NOTES: As soon as water is turned on, flow switch allows booster pump and ozone generator to turn on. After flow stops recirc pump and ozone continues to operate for 1 to 5 minutes or other preset time.

Fail safe performance: if there is no flow, booster pump will not operate. If there is water back-up from the injector, the Back-Flow Preventer will prevent water from reaching the ozone generator.



831.462.8500

support@cleanwatersstore.com www.cleanwatersstore.com  
2806-A Soquel Ave Santa Cruz, CA 95062

JOB: OZONE RECIRC  
DATE:  
CHECK:  
DRAWING ID: 004003