


OZONE AIR BUBBLER OXIDATION SYSTEM FOR HOLDING TANKS

KEY

- 1 Timer and/OR Relay Box
- 2 Compressor/blower
- 3 Pressure gauge 0 - 15 psi
- 4 Air flow meter 0 -20 cfh with valve for adjusting air flow
- 5 Ozone generator
- 6 Check valve (shipped installed on generator)
- 7 Check valve-connector

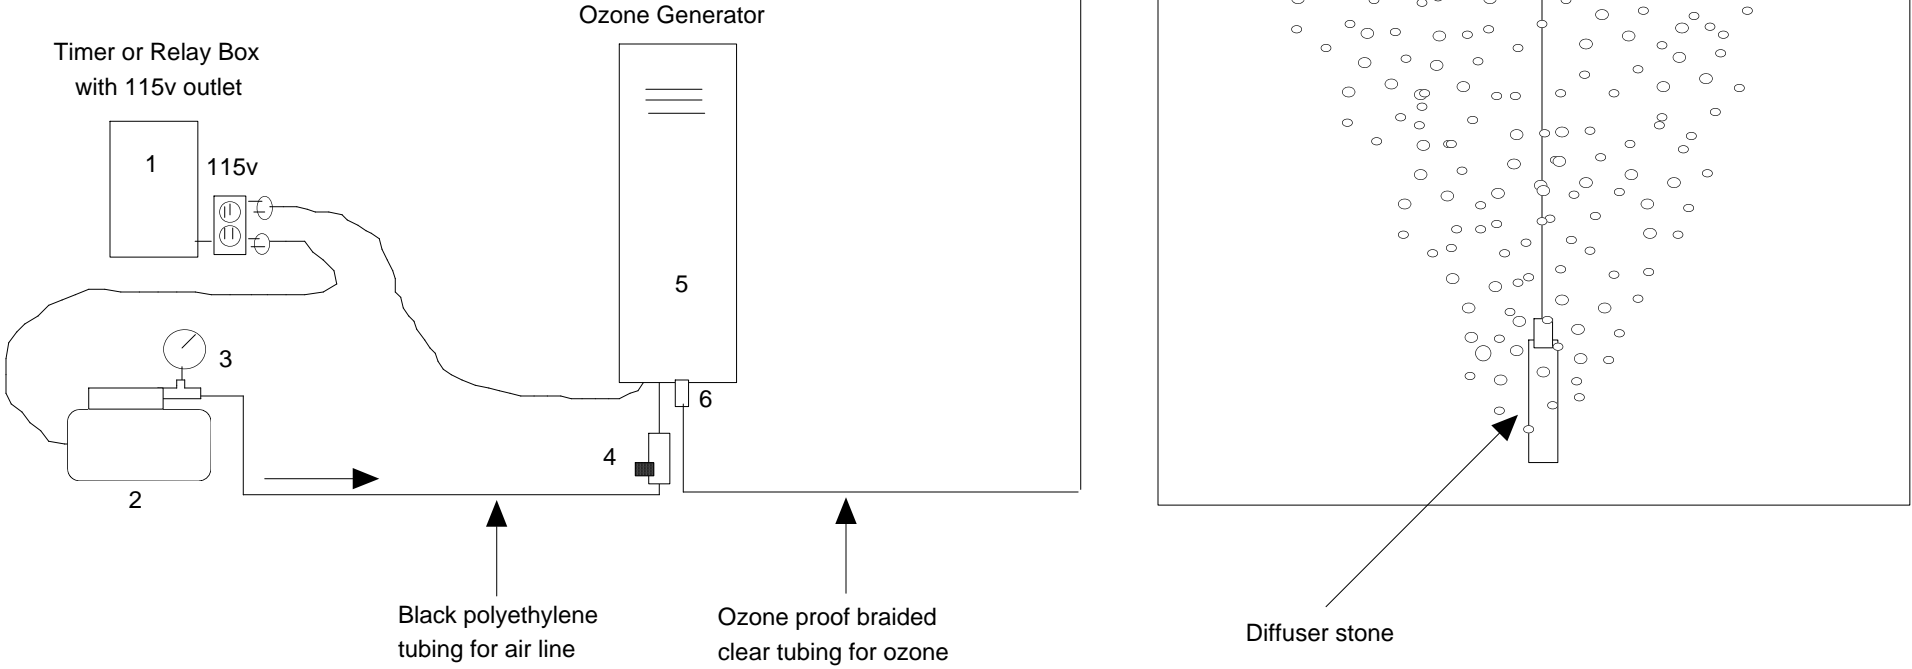

Black polyethylene tubing for air line

Ozone proof braided clear tubing for ozone

Diffuser stone

Storage tank with vented lid or vent installed on top



831.462.8500 FAX: 831.476.0832
 info@cleanwatersstore.com www.cleanwatersstore.com
 2806-A Soquel Ave Santa Cruz, CA 95062

JOB:

DRAWING ID: 002677

NOTE: Ozone generator can be wired to turn on when well pump turns on, OR run on a timer. Install ozone generator close to the storage tank as possible, using as short a piece of ozone tubing as possible, typically not more than 30 feet. Set air flow to 9 to 10 CFH. Air pressure at gauge should not exceed approximately 10 psi. Clean diffuser stone every six to twelve months with muriatic acid to prevent excessive pressure or loss of air flow in O3 generator.