



Clean Water Made Easy

www.cleanwaterstore.com

Pro-OX 7000-SXT Iron Filter Installation & Start-Up Guide

Thank you for purchasing a Clean Water System! With proper installation and a little routine maintenance your system will be providing iron-free water for many years.

Please review this start-up guide entirely before beginning to install your system and follow the steps outlined for best results.

PRO-OX MEDIA CONTAINS DUST.

USE PAPER MASK AND VENTILATE AREA TO AVOID BREATHING DUST DURING INSTALLATION

IMPORTANT: YOU MAY NOT NEED TO ADD ALL THE FILTER MEDIA YOU RECEIVED. THE FILTER TANK SHOULD NOT BE FILLED MORE THAN 2/3 FULL.



Questions?

Call us toll-free: 1-888-600-5426 or 1-831-462-8500

Email us: support@cleanwaterstore.com

See more information on our website: www.cleanwaterstore.com/resources

Table of Contents

Packing List.....	2
Pre-Installation.....	3
Best Practices for Piping & Drain Installation	3
How Your Pro-OX Filter System Works	4
Fig. 1: Pro-OX Filter Tank Diagram	4
Fig. 2: Typical Installation of a Pro-OX Filter System	5
Assembly and Installation Instructions	6
Fig. 3: Media Funnel Use.....	6
Fig. 4: Fleck 7000 Bypass and Pipe Connectors	7
Fig. 5: Fleck 7000 Bypass Knobs.....	7
Fig. 6: Backwash Drain Flow Control.....	8
Maintaining Your Pro-OX Filter System	10
Troubleshooting the Pro-OX 7000 Iron Filter System.....	11
What to Do If Your Filter Tank Does Not Sit Level on the Floor	11
Pro-OX 7000 Filter System (Non Flow Sensor) Standard Programming Guide.....	11
User Programming	11
Master Programming	12
Pro-OX 7000 Metered Flow Sensor Filter System Programming Guide	13
User Programming	13
Master Programming Mode (for Flow Sensor type)	14
How to Remove the Red Clips from Fleck 7000 Control Valves without Breaking Them.....	16

Packing List by Model

Each system comes with the following:

- 1 Fleck 7000-SXT Backwash Control Valve with Pipe connector kit (either 1" or ¾")
- 1 Fleck 7000-SXT Bypass valve
- 1 Enpress filter tank with distributor tube installed
- 1 Media funnel

In addition, each system comes with the following, depending on the model ordered:

1.0 Cubic Foot Pro-OX:

Quantity	Description
1	12 lbs Gravel
2	½ cubic foot boxes of Pro-OX filter media

1.5 Cubic Foot Pro-OX:

Quantity	Description
1	16 lbs Gravel
3	½ cubic foot boxes of Pro-OX filter media

2.0 Cubic Foot Pro-OX:

Quantity	Description
1	16 lbs Gravel
4	½ cubic foot boxes of Pro-OX filter media

2.5 Cubic Foot Pro-OX:

Quantity	Description
1	20 lbs Gravel
5	½ cubic foot boxes of Pro-OX filter media

Pre-Installation

1. Review your packing list and make sure you have received all the parts before beginning installation.
2. If you are going to be turning off the water to the house and you have an electric water heater, shut off the power to the water heater before beginning installation in case water heater is accidentally drained.
3. Pick a suitable location for your filter system on a dry level spot where it won't be exposed to freezing temperatures. A minimum of 20 PSI is required. Maximum pressure is 90 PSI.
4. Get all of your plumbing parts together before beginning installation. Installation typically takes 3 to 5 hours. However after installation the Pro-OX Pro-OX Filter must be allowed to run through a complete backwash and rinse cycle.
5. After the system is installed and running, your water may be discolored, or full of sediment or rust, particularly if this is older or corroded piping. Typically this clears up over a day or two.

Best Practices for Piping & Drain Installation

1. See typical installation (see Fig 2). The Pro-OX filter is installed after the pressure tank. If you are also installing a water softener, install the softener after the Pro-OX filter.
2. Make sure to follow to connect the in pipe to the Fleck 7000-SXT inlet and the outlet to the outlet (see Fig 2). As you face the Fleck 7000-SXT control from the front, the water enters on the right and exits on the left. From the back (see Fig 2) the water enters on the left. The inlet and outlet are attached to the bypass valve which is marked with arrows as well.
3. Make sure there is a working gate or ball valve before the Fleck 7000-SXT Pro-OX filter and also one after as shown in the diagram Fig 2. The pressure gauges are optional and perhaps not necessary but a hose bib (which is a faucet that you can attach a garden hose to) is strongly recommended after the Pro-OX filter before the second ball valve. This makes it easy to rinse your new Pro-OX filter on start-up and gives you a place to test the water before it enters your household plumbing.
4. If you will be using copper piping, do not sweat the copper pipe directly on to the Fleck 7000-SXT control valve. Avoid heating up the Fleck 7000-SXT control valve plastic with the torch.
5. You do not need unions to install your Fleck 7000-SXT control. If you need to remove it, the Fleck 7000-SXT has quick-release couplings that make it easy to put the Pro-OX Pro-OX filter on by-pass and remove the filter system from the piping.

- The drain line tubing (not supplied) is connected to a drain from the drain outlet using flexible ½" ID tubing. Note that the drain can run up above the Fleck 7000-SXT control and into a drain, it does not have to drain down, as the filter backwashes under line pressure from your well pump. Most plumbing codes require an air-gap connection, so that if your sewer or septic tank backs up, it cannot cross connect with the drain tubing.

How Your Pro-OX Filter System Works

See Fig 1. In your Pro-OX filter, the water enters the top of the tank (red arrows) and flows down through the media and up the distributor tube (blue arrows). Iron and manganese in the water turns to an oxidized particle upon contact with the media and is trapped in the media. During backwash, the water flow is reversed and water flows down the distributor tube and up through the media, lifting and expanding the Pro-OX (PRO-OX , also called 'FiloX') media, and removing all the iron and rust trapped in the filter. During the backwash the Pro-OX filter media is cleaned by the action of the water flowing up through it.

Fig 1 - Pro-OX Filter Tank Diagram



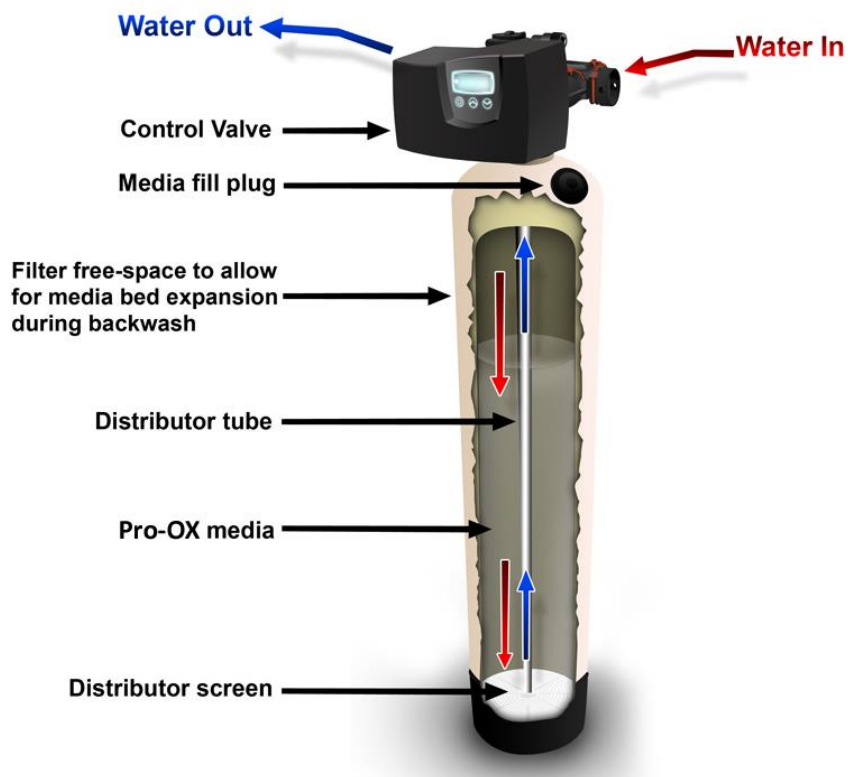


Fig 2 - Typical Pro-OX piping installation with ball valve and hose bib after the filter. Filter strainer is optional, and useful if there is sand or grit in the water. The 25/1 micron filter after is optional, and used when there is very fine sediment or colloidal particles over 1 micron present.

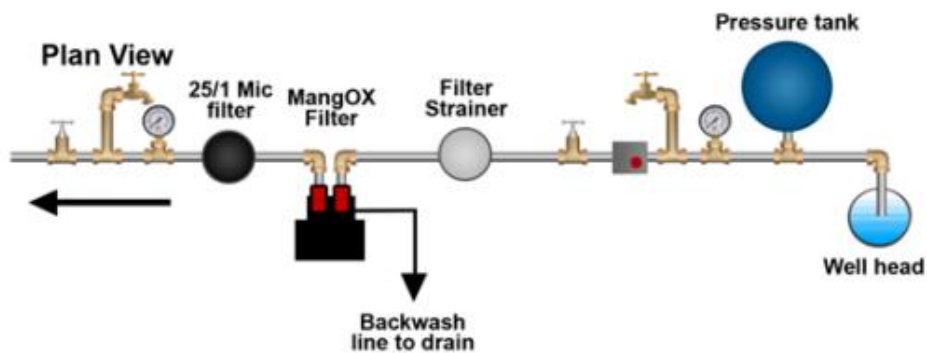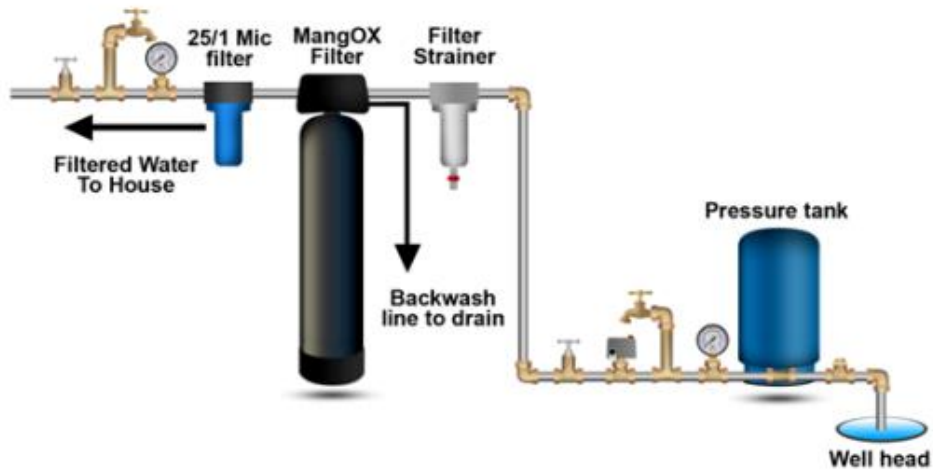

Assembly and Installation Instructions

1. Unscrew by hand the entire Fleck 7000-SXT control valve from top of tank if it was shipped screwed on. If not already done, make sure blue temporary plug is on top of distributor tube, or wrap the top of distributor tube with electrical or duct tape.

You do not want gravel or filter media to go down the distributor tube.


Fig. 3: Media Funnel Use

Temporary cap
on top of
distributor tube




2. Add filter gravel supplied first, using the funnel sent with the Pro-OX filter. **NOTE: Be sure not to let any parts of the bag or foreign materials enter the tank when you are adding media.**
3. Next add Pro-OX (PRO-OX media). Tank will be approximately 60% full.
4. Remove cap or tape from top of distributor tube.
5. Add 2 cups of household bleach down the inside of the distributor tube and fill tank completely with water. This will allow the Pro-OX media to become activated and also sanitize the media. It will also eliminate the need of “purging” the air out of the tank later.
6. **NOTE Regarding Teflon tape and pipe sealants:** It is OK to use Teflon tape and pipe sealant on the water pipe connector threads, where you attach your pipes or plumbing to the Fleck 7000. **DO NOT USE any Teflon tape or pipe joint compound on the tank itself or on the threads where the Fleck 7000 threads into the tank.** Please Note: When installing Fleck 7000 backwash control-timer valve on to the top of the filter tank, do not over-tighten. Tighten by hand; there is no need for a pipe wrench or other wrench.
7. See how the Fleck by-pass is connected (Fig 4). Note that Items 2 in Fig 4 below are the pipe connectors and the other end is what gets attached to the control valve. Items 3 are the red clips that hold the pipe connectors to the by-pass valve. To put system on or off bypass do NOT remove the red clips. Just turn knobs (1). **Fleck 7000 is usually shipped in by-pass position.**
8. Make sure the by-pass valve is in the bypass position when starting the installation. Follow the IN and OUT arrows on the bypass valve and control valve for proper connection of in and out water piping. Leave in the BY-PASS position for now.

Fig. 4: Fleck 7000 Bypass (1) & Pipe Connectors (2)

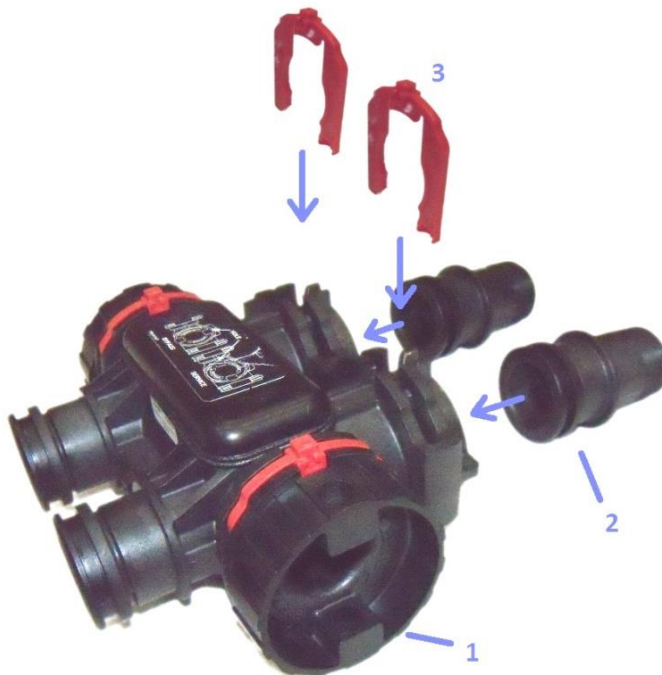

9. Lubricate the **by-pass valve o-rings only** on the pipe connectors with some vegetable oil or silicone grease and connect the bypass assembly to the Fleck 7000 control by sliding the bypass valve firmly into the body of the Fleck 7000. Once bypass is in far enough, you will be able to easily insert the red connector clips. **DO NOT USE PETROLEUM GREASE ON ANY PART OF THE FLECK 7000 CONTROL VALVE.**

Fig. 5: Fleck 7000 Bypass Knobs

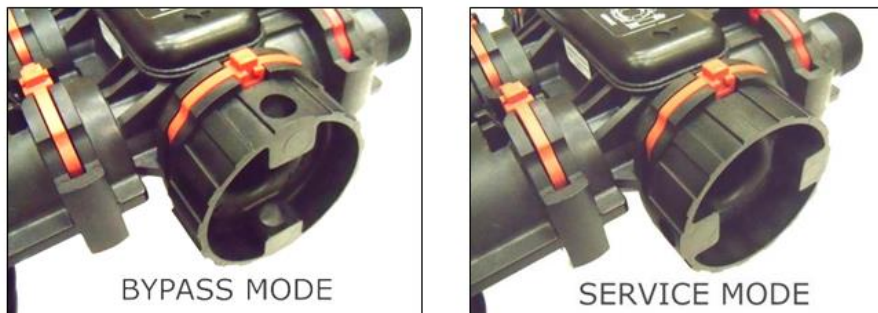

10. Now install your water pipes to the Fleck 7000-SXT bypass end connectors. Our preferred method is to wrap the pipe threads with 2 or 3 wraps of Teflon tape, then apply a thin coating of white non-hardening Teflon joint compound paste (available at all hardware stores) before

attaching the pipe fittings. Make sure inlet is installed to the 'In' pipe connector on the bypass valve and outlet is on the "Out" connector.

11. Connect some flexible tubing from the drain connection on the Fleck 7000-SXT control valve to a suitable drain such as a septic tank or drain to a sewer. It is OK to run the drain line up and over the Fleck 7000-SXT Pro-OX filter up to 4 feet above the top of the tank. If the drain line will be more than 20 feet, and especially if your system is a 2.0 or 2.5 cubic foot size, use larger diameter tubing such as $\frac{3}{4}$ " or 1". Note that it is desirable to be able to run the drain line into a bucket in order to test the backwash flow rate in the future. This is why hard piping the drain line is discouraged, however, if you do use hard PVC piping for the drain line, and you are able to remove the hard PVC drain piping and attach flexible tubing should you ever desire for testing purposes, it is OK to use rigid PVC pipe for the drain. Make sure the drain tubing is firmly clamped to the barbed fitting with a hose clamp to prevent leaks.
12. For the 1.5, 2.0 and 2.5 cubic foot and larger systems only: use the straight 1" drain line flow control fitting. If you have a 1.0 cubic foot size, the $\frac{3}{4}$ " drain line flow control is internal and there is no external flow control. Wrap some Teflon tape on the black drain fitting, and screw on the flow control.

Fig. 6 Backwash Drain Line Flow Control (DLFC)



90 degree $\frac{3}{4}$ " DLFC for 1.0 CF systems



Straight 1" DLFC for 1.5, 2.0, and 2.5 CF systems

13. Plug in your Fleck 7000 control valve to an outlet.
14. ENTER USER PROGRAMMING: Press and hold either the Up or Down buttons until the programming icon replaces the service icon and the parameter display reads TD (TIME OF DAY).
15. SET TIME OF DAY: Set the current time of day by pressing the up or down arrows until it is the current time of day. When the desired time is set, press the Extra Cycle button to resume normal operation, or wait 5 seconds, unit will return to normal operation if no button is pressed.

16. SET DAYS BETWEEN BACKWASHES: Hold down the up arrow and down arrow at the same time for 5 seconds. Set the number of days between backwashes, typically for every 3 days for moderate to heavy iron. If the iron level is low and water usage is light you can try setting it for every 4 days, but a setting of every 2 days is recommended by the manufacturer. If your iron is very high (over 4.0 ppm) and you use a lot of water you can set it to every night. Frequent backwashing prolongs the life of the media by several years.
17. SET TIME OF NIGHT BACKWASH WILL OCCUR: Press the Extra Cycle button once. Set the time of the night that you want the Pro-OX filter to backwash. The default time is 2:00 am. Adjust the time by pushing the up or down arrow if you want.
18. Now press the Extra Cycle button once more. You are done programming!
19. Now you are ready to turn on the water. Turn on the water and leave the Pro-OX filter on bypass and check for leaks. Leave the ball valve after the Pro-OX filter closed, so water is still off to the house, but connect a garden hose and open up the hose bib after the Pro-OX filter and allow the water to run for several minutes. This important step clears out any foreign material that may be in pipes from the installation. If you do not have a valve and hose bib installed after the Pro-OX filter, you will need to turn the water on inside the house to let the water run. Use a bathtub or laundry sink or other fixture that does not have an aerator screen.
20. Press the Extra Cycle button for a second or two which will start a manual backwash.
21. Now you can slowly turn the bypass valve to the service position. **You do NOT remove the red clips on the bypass knobs in order to turn the bypass valves from the bypass to the service position.** First open the Inlet Side of the bypass valve. Second slowly open the Outlet Side of the bypass until it is in the full service position. The Fleck 7000 bypass valve knobs are a little stiff, so you can use a screw driver placed in the holes to turn the knobs. Turn the bypass valve knobs in the correct direction which is counter-clockwise as you face the bypass valve knobs.
22. There should be no Pro-OX media coming out of the drain line, but the water will be black or dirty looking. At this point the Pro-OX filter will be in a backwash cycle. The backwash takes 10 minutes. If the water slows down or stops during the first 10 minutes of backwash, press the Extra Cycle to move the Fleck 7000 control to the next cycle, the Rinse cycle. Then repeat the backwash and rinse after the rinse cycle is done, by pressing the Extra Cycle again. If you have high water pressure you may need to turn on the water slowly to the Pro-OX filter at first to prevent some Pro-OX fines from coming out the backwash. However it is normal for some small amount of fines to come out during the backwash, although you do not want to see a large amount of media coming out, which would mean you have very high water pressure, or the drain flow control for the Fleck 7000 is missing.
23. If possible verify that the backwash flow rate. You can easily run the drain hose to a bucket and using a watch verify the flow rate in gallons per minute. For example, if the backwash fills a 5

gallon bucket in 30 seconds, you have 10 gallons per minute or 10 GPM. **An adequate backwash is critical to properly clean the Pro-OX media and prevent it from cementing together.**

1.0 Cubic Foot Model: 8 GPM minimum 10 GPM recommended

1.5 Cubic Foot Model: 8 GPM minimum 10 GPM recommended

2.0 Cubic Foot Model: 10 GPM minimum 12 GPM recommended

2.5 Cubic Foot Model: 13.0 GPM minimum 15 GPM recommended

24. The next cycle is the Rinse cycle and this runs for 6 to 8 minutes. After the backwash, the Fleck 7000 will automatically advance to the rinse cycle.
25. After the Pro-OX filter has gone through the backwash and rinse, press the Extra Cycle button and repeat the backwash and rinse. This is the same procedure that needs to be done each time you add Pro-OX media in the future, that is, the Pro-OX media must be thoroughly backwashed and rinsed.
26. Refer to your Fleck 7000 service manual for more information about how your control valve is programmed if desired.

Maintaining Your Pro-OX Filter System

There is little or no maintenance required. Every 6 – 10 years the Pro-OX media can be replaced for best results.

If your water has a lot of hydrogen sulfide odor or iron and manganese levels over 10 ppm, a chlorine feed pump may be needed to inject a small amount of chlorine before the well pressure tank and Pro-OX filter. The Pro-OX will remove any chlorine tastes or odors. In most cases this is not necessary but chlorination (or ozone, or peroxide injection) before the Pro-OX filter can greatly enhance the ability of the media to remove iron, manganese and hydrogen sulfide.

Troubleshooting the Pro-OX 7000 Iron Filter System

One problem that may occur is if you do not have enough backwash flow rate to properly clean the Pro-OX filter. You can verify the backwash flow rate by running the drain line into a bucket and timing it when the Fleck 7000 is in Cycle 1 or backwash.

In some cases, the Fleck 7000 may not be programmed correctly. See the Fleck 7000 service manual for instructions on how to access the master programming. Your Fleck 7000 should be set for FLtr or Filter mode and have two cycles, backwash and rinse.

If you are still getting some iron through the system, you can adjust the filter to backwash every 1 or 2 days.

In some cases if the untreated water is high in hydrogen sulfide, or the iron level is over 5 ppm, a chlorinator system may be needed before the iron filter, in order for the Pro-OX media to work properly.

What to Do If Your Filter Tank Does Not Sit Level on the Floor

Your black filter tank base is not glued to the bottom of your tank. Occasionally tank bases will become crooked during shipment. If you find that that your tank does not sit level on the floor, you can easily adjust it by holding the empty tank and rapping it on a concrete or solid floor once or twice in order to level it.

Pro-OX 7000 Filter System (Non Flow Sensor) Standard Programming Guide

This is for the standard Pro-OX filter systems that do NOT have the optional flow sensor. If your system is equipped with a flow sensor, see next section Page 13. There are two types of programming, standard USER PROGRAMMING, where you can set the time of day and days between backwashes. The second type is MASTER PROGRAMMING where you can set the length of the backwash and rinse cycles, and make sure the control is set to the correct settings for your type of Pro-OX filter:

User Programming

1. Press the Up and Down buttons for five seconds while in service, and the time of day is NOT set to 12:01 PM.
2. **Day Override (Display Code DO): Set to 1 to 14** based on your particular filter system requirements. Use the Up or Down arrows to change the setting. This is the critical setting that allows your filter to backwash every fixed number of days. See your Installation and Start-up Guide for more information or contact us for suggestions for this setting. Press the Extra Cycle button.
3. **Regeneration Time (Display Code RT): Set to 2:00 am** generally or sometime when no water is being used, and no other filter or softener is likely to be in a regeneration cycle. Press the Extra Cycle button.
4. Press the Extra Cycle button to end User Programming Mode.

The timer will exit Diagnostic Mode after 60 seconds if no buttons are pressed.
Press the Extra Cycle button to exit Diagnostic Mode at any time.

Master Programming

Perform a Master Reset: Unplug the Fleck 7000 from the electrical wall outlet. Hold the Extra Cycle button while plugging in and powering up the unit. This resets all of the parameters in the unit.

Enter Master Programming Mode: Set the Time of Day display to **12:01 P.M.** Press the Extra Cycle button (to exit Setting Time of Day mode). Then press and hold the Up and Down buttons together until the programming icon replaces the service icon and the Display Format screen appears.

Note, that when the Master Programming Mode is entered, all available option setting displays may be viewed and set as needed. Depending on current option settings, some parameters cannot be viewed or set.

1. **Display Format (Display Code DF): Set display to GAL** (stands for U.S. Gallons), or change to Liters or Cubic Meters if out of the U.S. Press the Extra Cycle button to go to the next step.
2. **Valve Type (Display code VT): Set to Fltr.** This refers to 'Filter', which is correct. Press the Extra Cycle button to go to the next step.
3. **Control Type (Display Code CT): Set to TC. Refers to Time Clock type, which it is.** Press the Extra Cycle button.
4. **Day Override (Display Code DO): Set to 7 or other** based on your particular filter system requirements. Use the Up or Down arrows to change the setting. This is the critical setting that allows your filter to backwash every fixed number of days. See your Installation and Start-up Guide for more information or contact us for suggestions for this setting. Press the Extra Cycle button.
5. **Regeneration Time: (Display Code RT): Set to 2:00 am** generally or sometime when no water is being used, and no other filter or softener is likely to be in a regeneration cycle. Press the Extra Cycle button.
6. **Regeneration Cycle Step Times:** Use this display to set the various minutes of each cycle. Press the Extra Cycle button to accept the setting and move to the next parameter.
 - a. **B1 – Backwash: Set to 8 to 10 minutes.**
 - b. **B2 - 2nd Backwash: Set to 0 for most applications.**
 - c. **RR - Rapid Rinse: Set to 6 minutes**

7. Press the Extra Cycle button to save all settings and exit Master Programming Mode. Note that the control valve may take several minutes to re-home and re-set after the Master Programming steps, do not unplug the control during this process.

Pro-OX 7000 Metered Flow Sensor Filter System Programming Guide

This is for Fleck 7000 backwash filters that have are equipped with the optional built-in flow sensor only. There are two types of programming, standard USER PROGRAMMING, where you can set the time of day and gallons of water used and/or days between backwashes. The second type is MASTER PROGRAMMING where you can set the length of the backwash and rinse cycles, and make sure the control is set to the correct settings for your type of Pro-OX filter:

User Programming

You can go into User Programming and make adjustments if you want to the flow meter setting or Day Override setting. Use the User Programming to avoid having to go through the Master Programming for quick changes to these settings below:

1. Press the Up and Down buttons for five seconds while in service, and the time of day is NOT set to 12:01 PM.
2. **Day Override (Display Code DO): Set to 1 to 14** based on your particular filter system requirements. Use the Up or Down arrows to change the setting. This is the critical setting that allows your filter to backwash every fixed number of days. See your Installation and Start-up Guide for more information or contact us for suggestions for this setting. Press the Extra Cycle button.
3. **Regeneration Time (Display Code RT): Set to 2:00 am** generally or sometime when no water is being used, and no other filter or softener is likely to be in a regeneration cycle. Press the Extra Cycle button.
4. **Feed Water Hardness:** Use this setting to adjust the feed water hardness. Set for 20 for most applications. Press the Extra Cycle button. Note that actual 'Feed Water Hardness' is irrelevant to filter systems, since no hardness is being removed.
5. Press the Extra Cycle button to end User Programming Mode

Master Programming Mode (for Flow Sensor type)

Perform a Master Reset: Unplug the Fleck 7000 from the electrical wall outlet. Hold the Extra Cycle button while plugging in and powering up the unit. This resets all of the parameters in the unit.

Enter Master Programming Mode: Set the Time of Day display to **12:01 P.M.** Press the Extra Cycle button (to exit Setting Time of Day mode). Then press and hold the Up and Down buttons together until the programming icon replaces the service icon and the Display Format screen appears.

Note, that when the Master Programming Mode is entered, all available option setting displays may be viewed and set as needed. Depending on current option settings, some parameters cannot be viewed.

1. **Display Format (Display Code DF): Set display to GAL** (stands for U.S. Gallons), or change to Liters or Cubic Meters if out of the U.S. Press the Extra Cycle button to go to the next step.
2. **Valve Type (Display code VT): Set to DF2b.** This means it is set for standard Down-flow mode, similar to a water softener so we can take advantage of the flow meter in this Fleck 7000 5-cycle valve, but we won't be using all the 5 cycles that the water softeners use. Press the Extra Cycle button to go to the next step.
3. **Control Type (Display Code CT): Set to Fd. This is the Meter Delayed option.** This tells the Fleck 7000 control to meter or keep track of the amount of water used, but then wait until the pre-set regeneration (backwash and rinse cycles) time, typically in the middle of the night. Press the Extra Cycle button.
4. **Unit Capacity (Display Code C): Set to 30.** Use this display to set the Unit Capacity. This setting specifies the treatment capacity of the unit. Since we are not using this for softening, where the capacity of the softening resin can be accurately defined, 30 is a number we can start with. This can be set higher or lower later which will allow the meter to backwash more or less frequently based on the capacity. Press the Extra Cycle button.
5. **Feed water Hardness (Display Code H): Set to 10 to 20.** This is the feed water hardness that allows the meter to calculate the number of gallons between backwashes. It is a little meaningless for filter valves, and is designed for water softeners which remove calcium hardness in grains per gallons. However, if you set it to 20, to start with, you will later see the number of gallons between cycles when you are finished programming based on your size of system. It is not that critical, because you want the filter to backwash once a week or every few days based on the type of filter system you have, by setting the Day Over-Ride.
6. **Reserve Selection (Display Code RS): Set to SF.** It is not relevant to filter control valves.
7. **Safety Factory (Display Code SF): Set to 0.**
8. **Day Override (Display Code DO): Set to 1 to 14** based on your particular filter system requirements. Use the Up or Down arrows to change the setting. This is the critical setting that allows your filter to backwash

every fixed number of days. See your Installation and Start-up Guide for more information or contact us for suggestions for this setting. Press the Extra Cycle button.

9. **Regeneration Time: (Display Code RT): Set to 2:00 am** generally or sometime when no water is being used, and no other filter or softener is likely to be in a regeneration cycle. Press the Extra Cycle button.
10. **Regeneration Cycle Step Times:** Use this display to set the various minutes of each cycle. Some of the cycles will be set to 0. **Do not set any of the cycles to Off.** Use the Up or Down arrows to change the setting to the desired setting. Press the Extra Cycle button to accept the setting and move to the next parameter.
 - a. **B1 – Backwash: Set to 8 to 10 minutes.**
 - b. **BD - Brine Draw: Set to 0.**
 - c. **B2 - 2nd Backwash: Set to 0 for most applications.**
 - d. **RR - Rapid Rinse: Set to 6 to 8 minutes**
 - e. **BF - Brine Fill: Set to 0.**
 - f. **SV - Service (meaning it is in Service or filtering mode) no setting is needed for this.** Press the Extra Cycle button
11. **Flow Meter Type (Display Code FM):** Set to t1.2 (this is standard Fleck 7000 meter). Press the Extra Cycle button.
12. Press the Extra Cycle button to save all settings and exit Master Programming Mode. Note that the control valve may take several minutes to re-home and re-set after the Master Programming steps, do not unplug the control during this process.

How to Remove the Red Clips from Fleck 7000 Control Valves without Breaking Them

The Fleck 7000 is a great programmable control valve that lasts many years. While it is easy to install and program, reading this guide prior to installation can save you some time when removing the red clips.

What happens is, when the water is first turned on and the control valve comes up to line pressure, the bypass valve and pipe connectors push out or push apart slightly and lock in the red clips. When the water is turned off, and even if there is no water pressure, it's impossible to remove the jammed in clips, without great difficulty, and eventually most customers end up breaking them to get them out.

Step 1: Turn off water to the Fleck 7000 and relieve the water pressure by opening up a faucet in the house. You can also put the Fleck 7000 on bypass, by turning the bypass valves to bypass. **Either way, the 7000 control valve must be depressurized before removing the red clips.**

1. Push the bypass and pipe connectors against the body of the control valve.



Step 2: At that point they can practically be removed with your fingertips, although a small flat head screw driver or needle nose pliers works best to pull out the red clips.